

III. E R S A T Z T E I L L I S T E

SHUGART FLOPPY


Allgemeines


Die laufende Nummer No. der Ersatzteilliste ist der entsprechenden Abbildung zugeordnet.

Eine Ersatzteilbestellung kann nur mit der korrekten Code-No. bearbeitet werden.

Unter PART ist die Stückzahl pro Gerät angegeben.


Elektronische Bauteile sind nach der allgemeinen Normteilliste zu bestellen. Bauteile, die nicht in der Normteilliste enthalten sind, können mit Typen- und Gerätenamen bestellt werden.

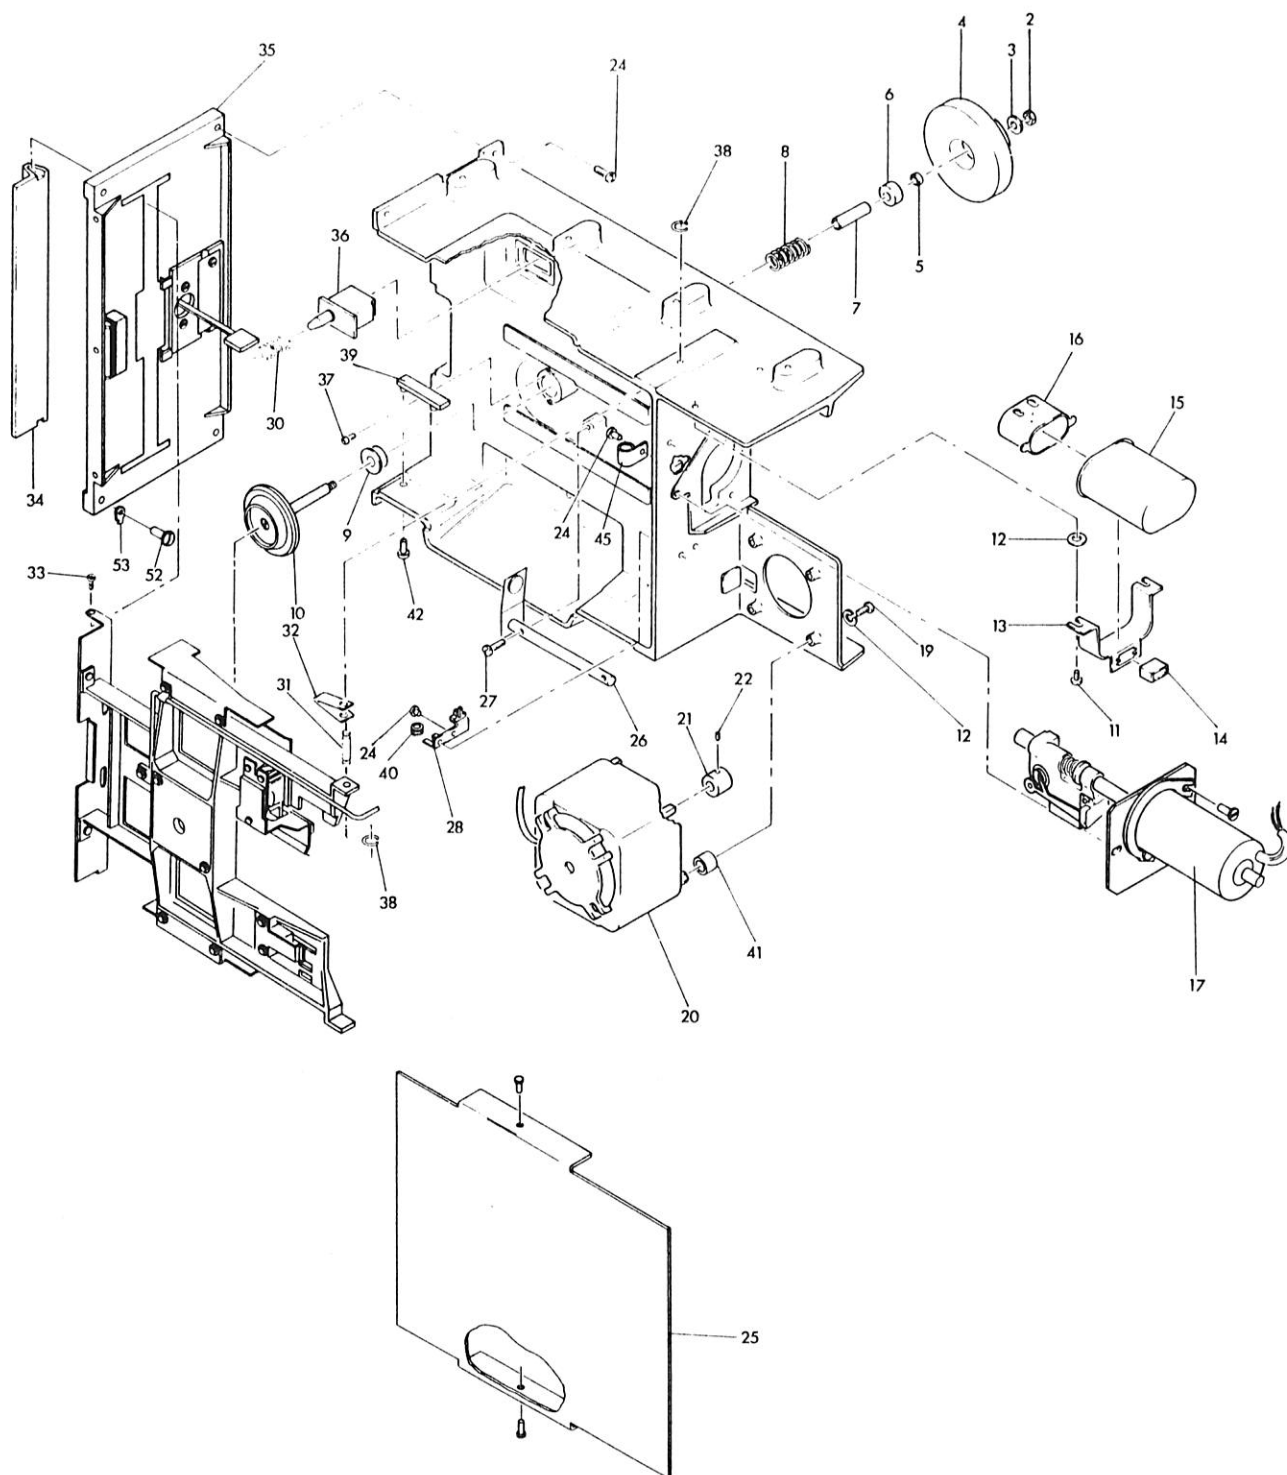

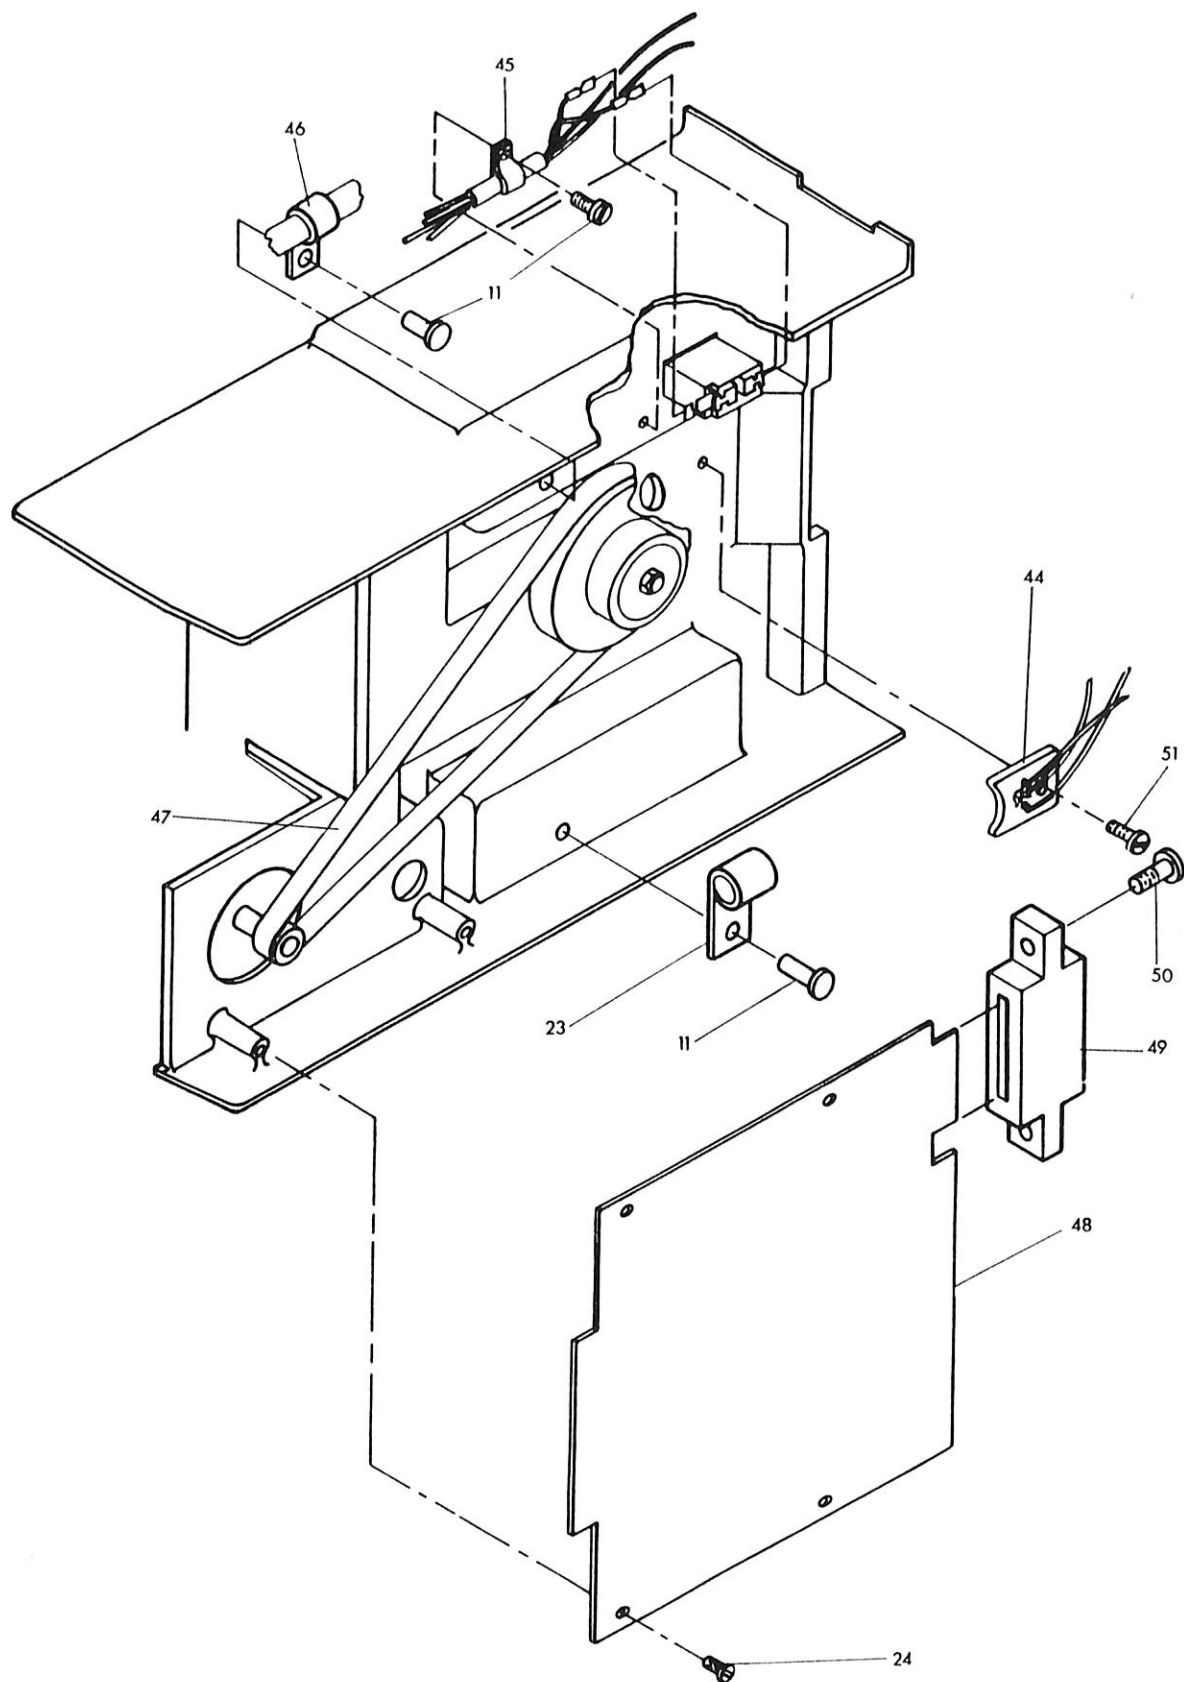


No.	CODE No.	TYPE	PART
-	341-30200	Drive Assembly DS 2000/SAT 808	
-	808-56200	Drive Assembly SAT 808	
1	808-55840	. Cartridge Guide Assembly	1
2	808-55020	. Nut, 8-32	1
3	808-55320	. Washer, Spring	2
4	808-55430	. Pulley Assembly, Spindle	1
5	808-55450	. Spacer, Spindle-Short	1
6	808-55140	. Bearing, Spindle	1
7	808-55440	. Spacer, Spindle-Long	1
8	808-55560	. Spring, Spindle	1
9	808-55150	. Flanged Bearing, Spindle	1
10	808-55890	. Hub Assembly, Spindle	1
11	808-55240	. Screw 8-32 x .312	5
12	808-55310	. Washer; Lock Nr. 8	2
13	808-55490	. Bracket	1
14	808-55060	. Housing, 3 Pin Connector	1
15	808-55030	. Capacitor, 110V 50/60 Hz (Bodine MTR only)	1
	808-55340	. Capacitor, 220V 50/60 Hz or 110V Oriental MTR	1
16	808-55050	. Rubber Boot	1
19	808-55290	. Screw 8-32 x .750	4
20	808-55760	. Motor, 110 V 50/60 Hz KIT	1
	808-55680	. Motor, 208/230/220 V 50/60 Hz	
21	808-44730	. Pulley, 60 Hz	1
	808-55720	. Pulley, 50 Hz	
22	808-55180	. Screw, Set 6, 32 x .125	1
23	808-55130	. Cable Clamp, 1/8 Inch	1
24	808-55230	. Screw 6-32 x .312 (12014 for Zinc Faceplate)	11
	808-55090	. Screw 6-32 x .438 800R	2
25	808-55750	. Dust Cover Kit (Optional)	1
	808-55260	. . Screw, THD Form, Pan HD	2
	808-55420	. . Cover	1
26	808-55770	. Spring/Guide ASM	1
27	808-55220	. Screw 4-40 x .375	2
28	808-55510	. Detector Assembly, Track O	1
30	808-55940	. Spring Assembly, Door Open (Standard)	1
	808-55950	. Spring Assembly, Door Open Horz.MNT, PCB Down)	
31	808-55570	. Pivot Top	1
32	808-55580	. Spring Bias	1
33	808-55190	. Screw B.V.	2
34	808-55540	. Handle	1
35	808-56080	. Front Plate Assembly	1
36	808-55350	. Switch, Door Open	1
37	808-55210	. Screw, 4-40 x .250	2
38	808-55160	. Clip	2
39	808-56140	. Deflector	2
40	808-55910	. Grommet	1
41	808-55970	. Spacer	4
42	808-55300	. Screw Nr. 8 x .50 LG Tapping	2


No.	CODE No.	TYPE	PART
44	808-55520	. Phototransistor and Cable Assembly	1
45	808-55120	. Cable Clamp, 3/16"	2
46	808-55110	. Cable Clamp, 3/8"	1
47	808-55710	. Belt (60 Hz)	1
	808-55700	. Belt (50 Hz)	1
48	808-55360	. PCB (SA 800, 5V, no Data Sep)	1
	808-55370	. PCB (SA 800, -12/-15V, no Data Sep)	
	808-55380	. PCB (SA 800, -5V, with Data Sep)	
	808-55390	. PCB (SA 800, -12/-15V, with Data Sep)	
	808-55400	. PCB (SA 801, -5V)	
	808-55410	. PCB (SA 801, -12/-15V)	
49	808-55040	. Block, PCB Conn	1
50	808-55070	. Screw, 4-40 x .500	2
51	808-55250	. Screw, 8-32 x .375	1
52	808-55080	. Screw, 6-32 x .250 - 800R	2
53	808-56040	. Clip, Face Plate Mount-800R	2

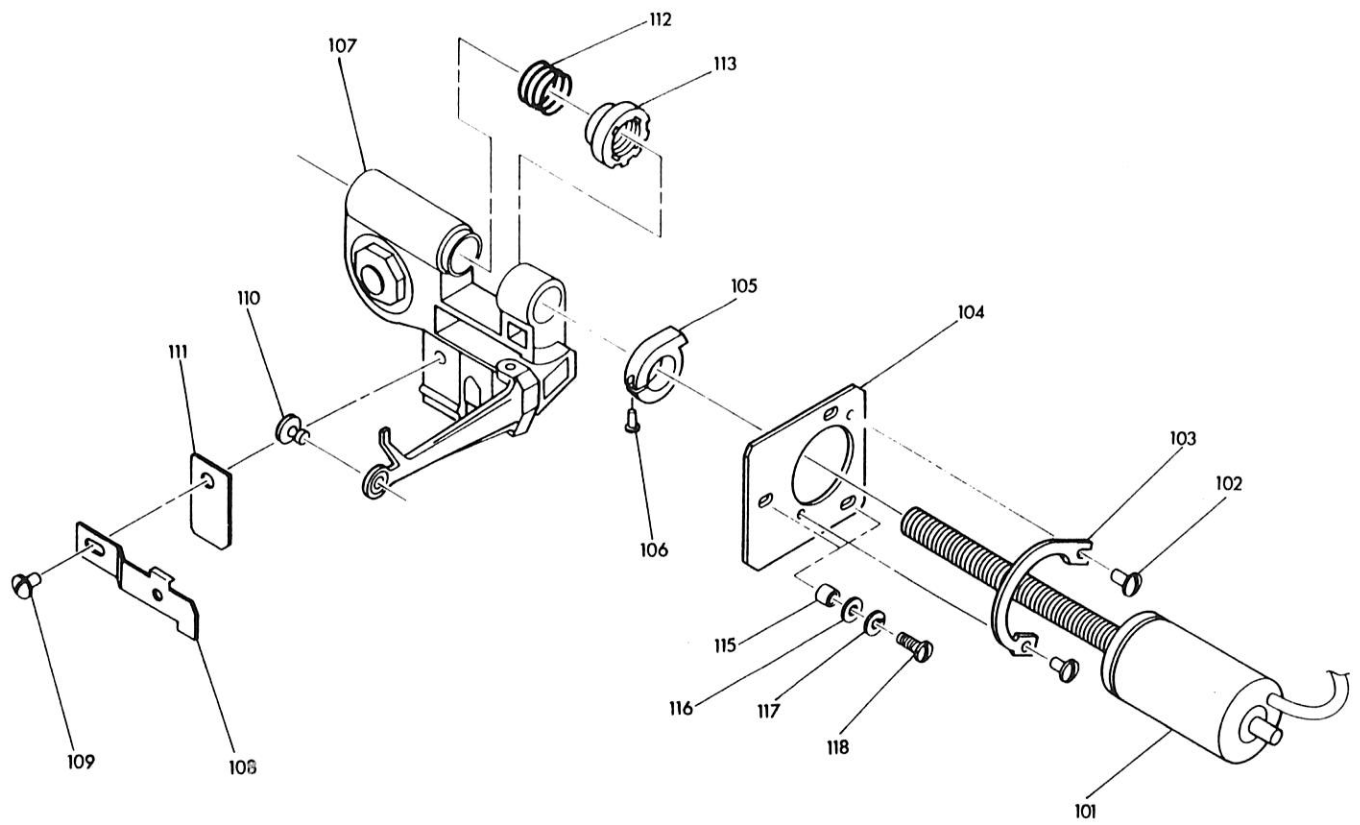

No.	CODE No.	TYPE	PART
	--	Stepper/Carriage Assembly	
101	808-55530	. Stepper Motor Assembly	1
102	808-55250	. Screw, 8-32 x .375	2
103	808-55960	. Mounting Clamp	1
104	808-55500	. Plate, Stepper Motor	1
105	808-55600	. Stop, Limit-Lead Screw	1
106	808-55170	. Screw, Cap 2-56 x .250	1
107	808-55900	. Carriage Assembly	1
108	808-55780	. . Flag, Track O	1
109	808-55200	. . Screw, 4-40 x .250	1
110	808-55790	. . Load Button	1
111	808-55740	. . Spring, Plate	1
112	808-55470	. . Nut	1
113	808-55480	. . Spring, Pre-Load	1
114	808-55000	. . Washer	1
115	808-56050	. Spacer	1
116	808-55010	. Washer, No. 6 Flat	3
117	808-55330	. Washer, Spring	3
118	808-55280	. Screw, 6-32 x .500	3

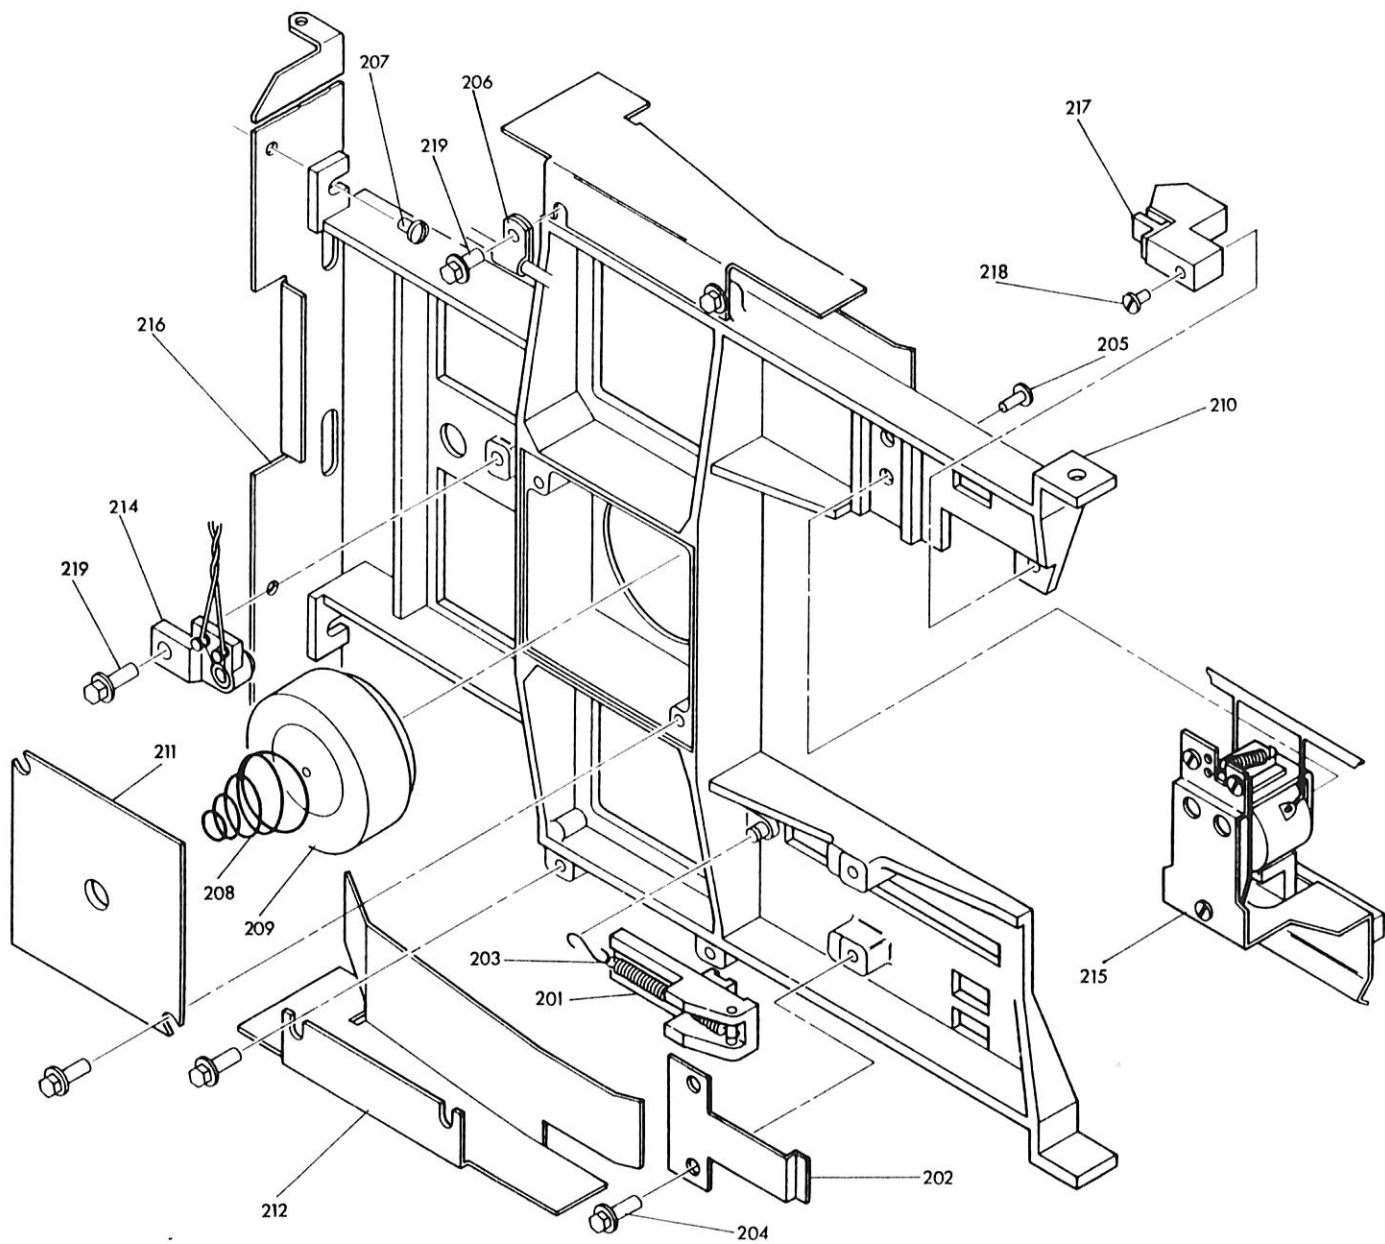

No.	CODE No.	TYPE	PART
	808-55840	Cartridge Guide Assembly	
201	808-55980	. Ejector Assembly	1
202	808-55850	. Spring, Clamp, Ejector	1
203	808-55860	. Hook, Spring	1
204	808-55240	. Screw 8-32 x .312	7
205	808-55230	. Screw 6-32 x .312	1
206	808-55130	. Clamp, Cable	1
207	808-55080	. Screw 6-32 x .250	2
208	808-55460	. Spring, Hub Clamp	1
209	808-55610	. Hub Clamp Assembly	1
210	808-55800	. Guide	1
211	808-55810	. Plate, Hub Clamp	1
212	808-55820	. Stripper, Bottom	1
213	808-55830	. Stripper, Top	1
214	808-55870	. L.E.D. Assembly	1
215	808-55880	. Head Load Actuator Assembly	1
216	808-55920	. Latch Plate	1
217	808-55690	. Write Protect Detector Assembly	1
218	808-55270	. Screw 4-40 x .625	1
219	808-55250	. Screw 8-32 x .375	2

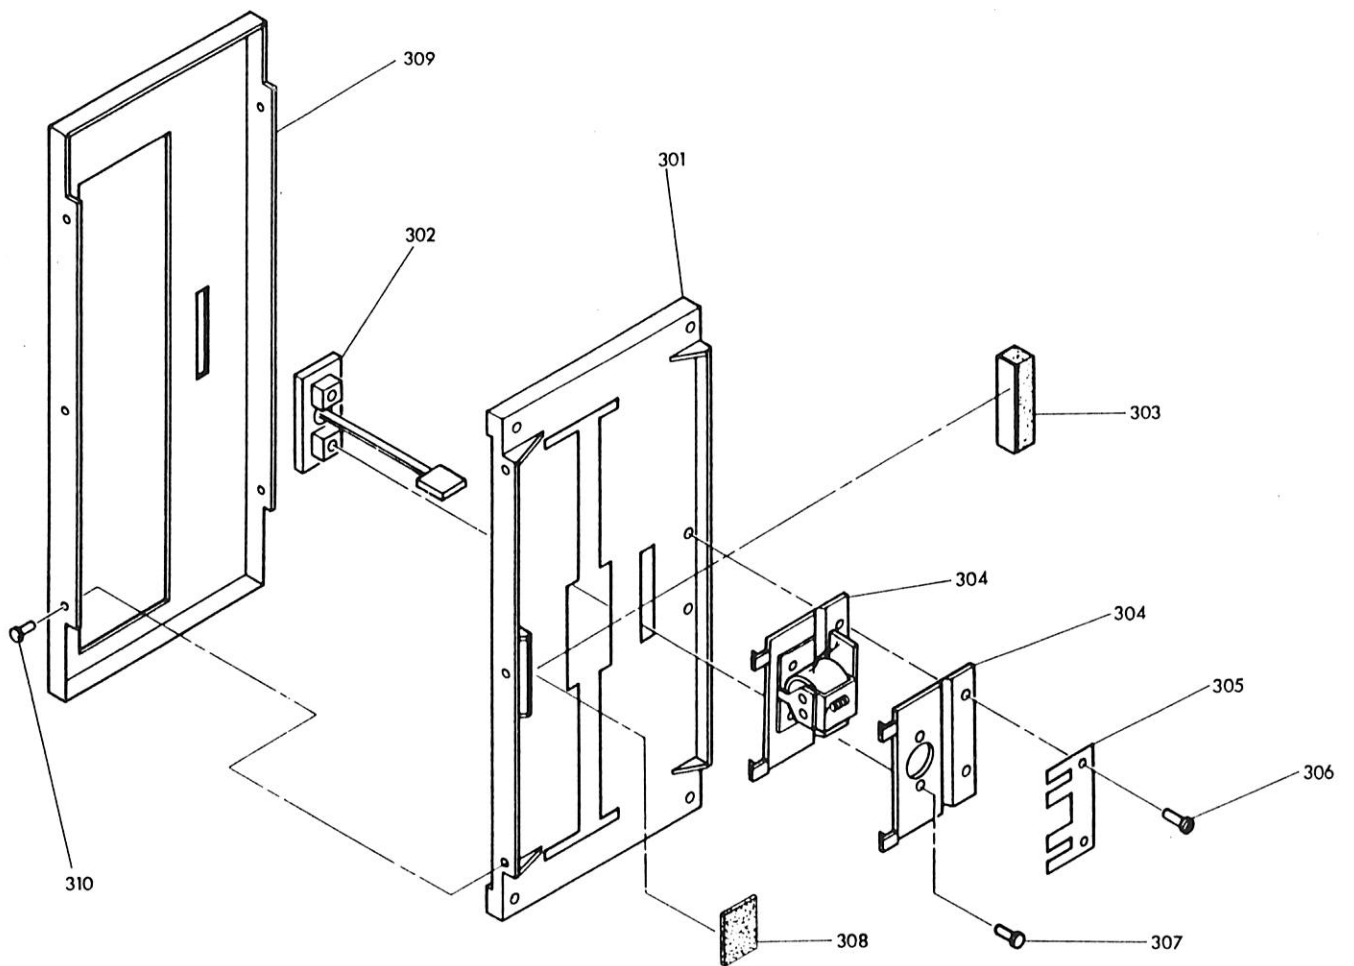

No.	CODE No.	TYPE	PART
300	808-56120	Front Plate Assembly (with Lite)	
	808-56110	Front Plate Assembly (without Lite)	
	808-56130	Front Plate ASM Kit (with Door Lock)	
	808-56010	Front Plate ASM-800R (without Lite)	
	808-56020	Front Plate ASM-800R (with Lite)	
	808-56060	Front Plate ASM-800R (with Door Lock)	
301	808-56100	. Front Plate	1
	808-55990	. Front Plate.800R	1
302	808-56080	. Push Button (with Lite)	1
	808-56070	. Push Button, Door Lock Option	
	808-56090	. Push Button (without Lite)	1
303	808-55590	. Bumper	1
304	808-55550	. Latch	1
	808-56020	. Latch ASM, Door Lock Option	
305	808-56030	. Spring Plate	1
306	808-55230	. Screw 6-32 x .312	2
307	808-56150	. Screw 4-40 x .250	2
308	808-55930	. Snatch	1
309	808-55620	Cover, Front 5-1/4 x 11 White	1
	808-55630	Cover, Front 5-1/4 x 11 Tan	1
	808-55640	Cover, Front 5-1/4 x 10 White	1
	808-55650	Cover, Front 5-1/4 x 10 Tan	1
	808-55660	Cover, Front 4-5/8 x 10-1/2 White	1
	808-55670	Cover, Front 4-5/8 x 10-1/2 Tan	1
	808-56000	Cover, Front -800R Tan	1
310	808-55100	Screw, FL. HD, 4-40 x .250	5